



# Removing and Replacing a Manifold Tube or Manifold Auxiliary Water Tube

Follow these instructions to remove and replace the manifold tube or manifold auxiliary water tube in the scope drying and tracking system.

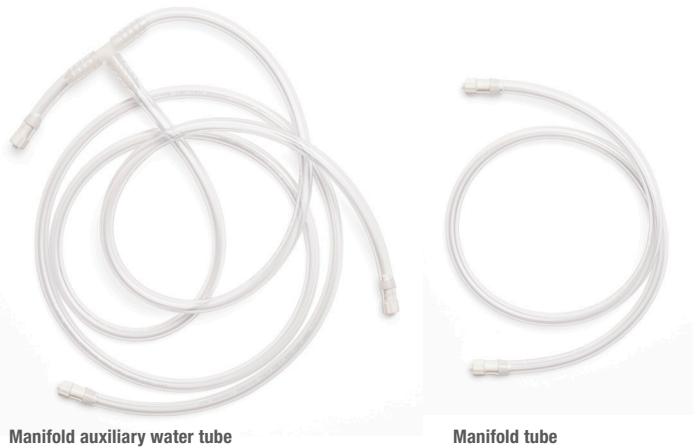

## To remove

Turn the tube fitting to the left to loosen and remove the tube from the manifold

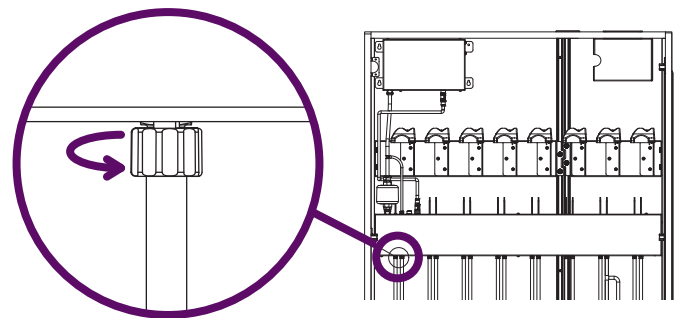

## To replace

To replace the tube, insert a new tube and turn the hose fitting to the right until the tube is firmly attached to the manifold

