


Electronic Lock Quick Reference Guide

Blue LED – Indicates accepted command or controller waiting for command

Red LED – indicates incorrect command or timed out

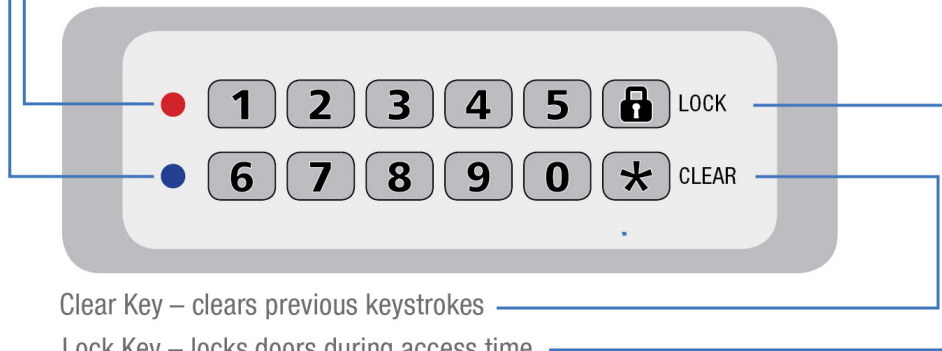

Clear Key – clears previous keystrokes

Lock Key – locks doors during access time

Factory Preset Code – 1 2 3 4

Factory Supervisor Code – 7 1 8 3

To add new access code:

Press – * 7 1 8 3 *

Press – 5 *

Enter new 4-digit code. The blue light will flash when completed.

To remove access code:

Press – * 7 1 8 3 *

Press – 3 *

Enter the 4-digit access code that needs to be removed. The blue light will flash when completed.

To change auto-lock time:

Press – * 7 1 8 3 *

Press – 6 *

Enter the minutes and seconds using 4 digits. Example: 5 minutes, 30 seconds = 0530

The blue light will flash when completed.

To add new supervisor code:

Press – * 7 1 8 3 *

Press – 7 *

Enter the 4-digit access code that needs to be removed. The blue light will flash when completed.