

# Lock Instructions

*Storage Solutions for Healthcare*

Lock instructions for  
Stanley InnerSpace products  
purchased before October 1, 2018

## 5000 Series Electronic Locks

*For additional assistance contact:*

Solaire Medical

888 435 2256 - phone

616 743 5944 - fax

[solairemedical.com](http://solairemedical.com)



Solaire Medical | P.O. Box 2808 | Grand Rapids, Michigan 49501  
888-435-2256 phone | 616-743-5944 fax | [solairemedical.com](http://solairemedical.com)

© 2018 Solaire Medical, Grand Rapids, MI 49501  
© InnerSpace is a registered trademark of Solaire Medical, Grand Rapids, MI 49501


# 5000DKE Lock Instructions

## ATTENTION IMPORTANT LOCK INFORMATION

### Start-Up Instructions for 5000DKE locks

#### Opening and programming a new cabinet lock:

- All 5000DKE electronic locks are pre-set with the following code: **1-2-3-4-#**  
 This code was pre-set using step #1 of the Quick Programming Guide (a copy is placed in a sealed envelope on the back of each cabinet) that is included with the lock. This code is programmed as a supervisor code.

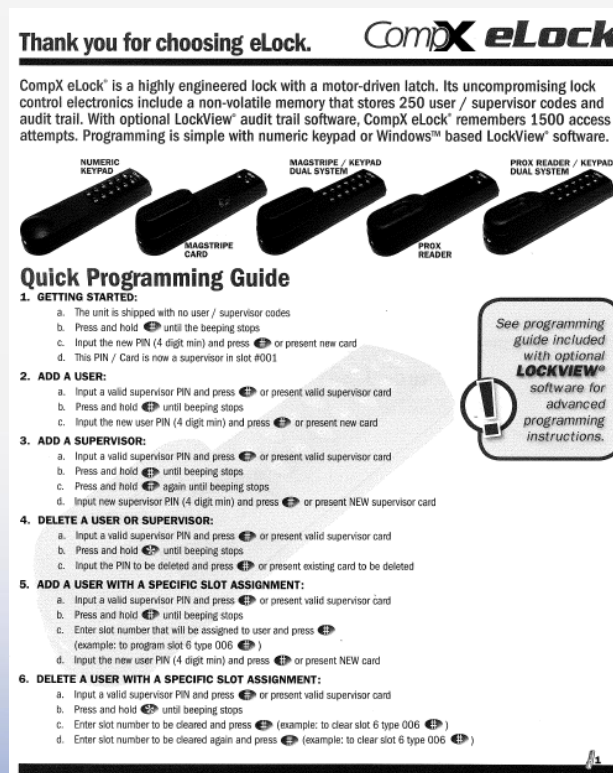


- To change this preset supervisor code, enter a new supervisor code by following step #3 of the Quick Programming Guide.
- Then to delete the pre-set code follow step #4 of the Quick Programming Guide using the new supervisor code that you programmed.
- At this point continue entering users or supervisors by following the steps in the Quick Programming Guide.

Performing a factory reset:

In the event the pre-set lock code is unknown or non-functioning, you can perform a factory reset and program your own unique supervisor code by following the steps below:

1. Locate the green serial number tags/labels provided in the sealed envelope on the back of the newly received cabinet.
2. Identify the 14-digit code marked "Factory Rst" (reset) on the green label.

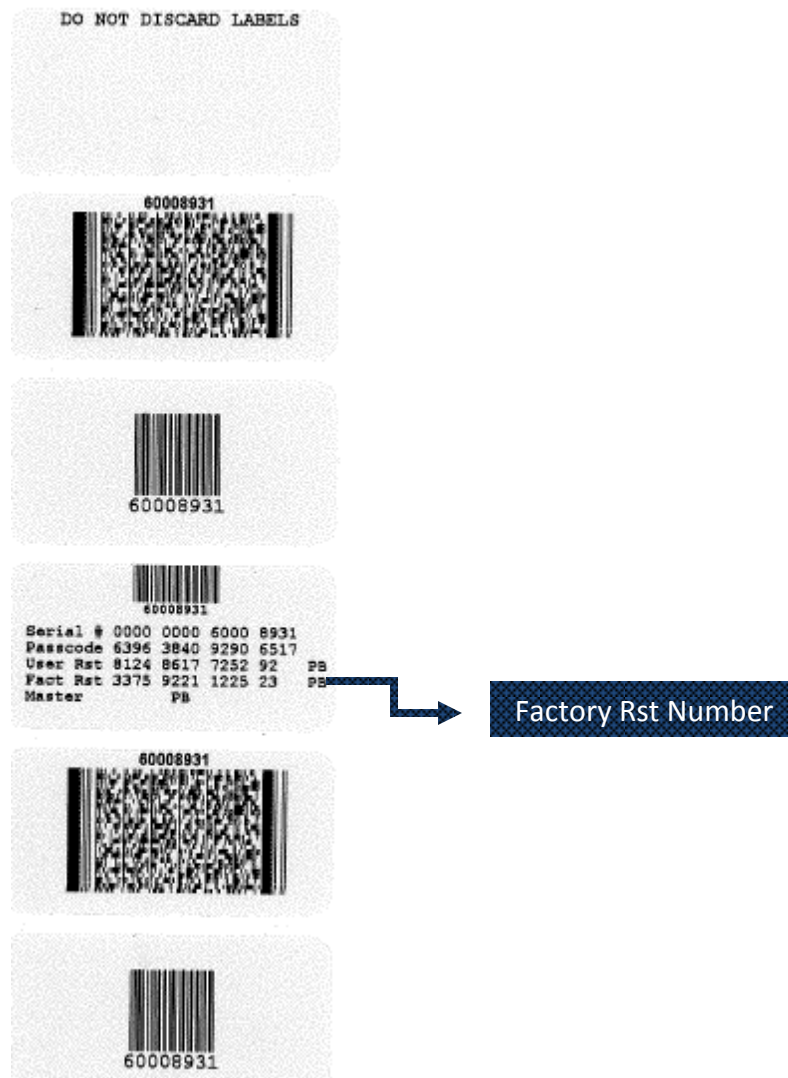

3. Using the Lock Keypad, press and hold the # button until beeping stops
4. Enter the 14-digit Factory Reset code identified on the green label in step 2 above followed by the # button (You will hear several beeping sounds – this is normal).
5. Now follow Step #1 of the Quick Programming Guide under "Getting Started" to program your Supervisor Access code.

6. Be sure to record this number and keep in a secure location in the event it is needed at a later time. This number is now this individual cabinet's valid Supervisor Access Code that allows all cabinet access, addition and deletion of users to the cabinet.

**Important! Save this information.**

Each 5000DKE electronic lock comes with its own serial number. It is important that this serial number is associated with the lock and the cabinet it is installed in. There are barcode and serial number tags included for your records for each individual lock. One of the tags includes the following: serial number, pass code number, user reset number, and factory reset number.

These numbers should be filed in a safe place so that they can be referenced if needed at a later time. It is advised that each cabinet be tagged or labeled so that the lock can be identified at a later time.

Accessing a cabinet to replace lock batteries:

If for any reason the lock batteries die or lose function, follow the steps below to unlock the cabinet and replace the batteries.

1. Locate a 9-volt battery.
2. Press the 9-volt battery to the "jump ports" (2 metal contact points) located on bottom of the lock keypad.



3. While maintaining contact between the 9-volt battery and the jump ports, enter your Supervisor code to unlock the cabinet.
4. Once the cabinet unlocks, locate the lock battery pack within the inside door of the cabinet.
5. Utilizing a small Phillips-head screw driver, remove the four (4) screws on the back of the battery compartment and replace the four (4) AA batteries.
6. Replace and secure the battery pack cover.