


Connecting Scope Drying Unit to Building's Air Supply

Ventaire™ Endoscopy System

Instruction Guide for Scope Drying Unit

Follow these instructions to connect a scope drying unit to a building's air supply.

Make sure the scope drying unit is off
Connect a ¼" quick-disconnect hose to the air valve on the unit

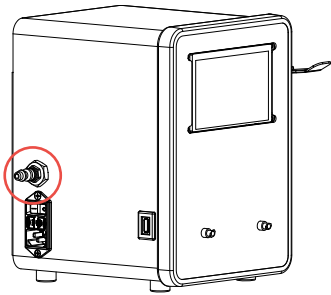

Turn unit on. Air is now ready to flow through unit

Caution: Make sure air is regulated to 10 PSI maximum.
Pressure exceeding 10 PSI can damage endoscopes.