

Attaching a Slope Top to a Roam Supply Cart

Follow these instructions to install a slope top on a Roam cart.

Tools needed


- Phillips head screwdriver
- 5/64" Allen wrench

Step 1

Use screwdriver to remove the screws from the 4 corner trim pieces. There are 2 screws on each corner trim piece per corner for a total of 8 screws to be removed.

Step 2

Use Allen wrench to remove the 4 screws from the cart's existing flat top. Screws are located inside the cart on the underside of the top.

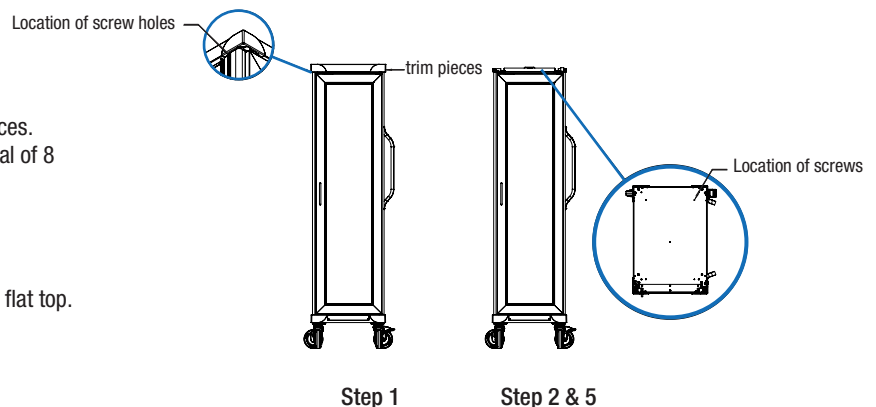

Step 3

Remove the top by lifting straight up and off.

Step 4

Set the slope top on top of the cart.

Step 5

Secure the slope top to the cart from the inside of the cart with the 4 screws.

Step 6

Reattach the 4 corner trim pieces with the 2 screws per trim piece (total of 8 screws).

