


Connector Kit Instructions

Connector Kit 18 (SVCK18)

Follow these instructions to attach a connector to a scope.

Kit includes:

- Connector
- Biopsy port cover

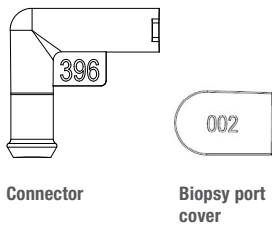


Step 1

Attach the connector to the manifold tube

Step 2

Insert the connector into the suction valve port below the control knobs on the scope body

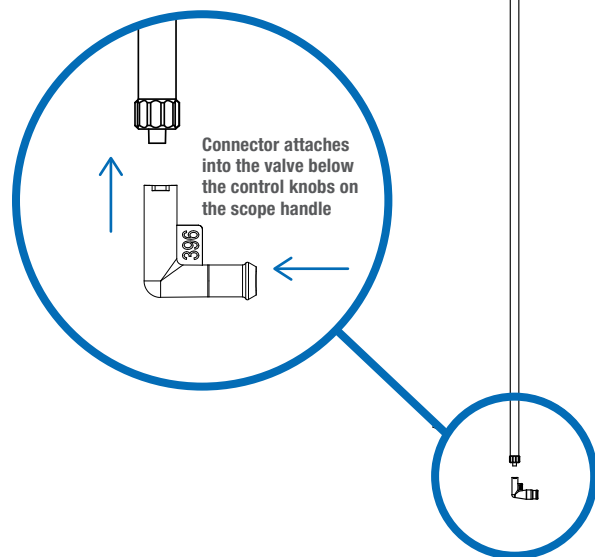

Step 3

Slide the cover onto the biopsy valve

